

Part no.	WSM21-ID
Catalog No.	060628

Product range			Ci insulated enclosures
Basic function			Distribution board assembly
Product function			Section for mounting frames
Single unit/Complete unit			Single unit
Surface finish			Galvanized C section
Information about equipment supplied			Order fixing screws seperately
For use with			For floor-standing distribution boards, 4 panels wide
For use with			
Profile shape			Vertical section (centre)
Length	mm	2625	
125 mm grid spacing	Number	21 x 125	

General

Operating and ambient conditions to VDE 0660 Part 500			
Surface finish			Galvanized C section

Surface finish			Galvanized C section
----------------	--	--	----------------------

Cabinet enclosures (EG000011) / Component for arrangement / baying system (switchgear cabinet) (EC002622)			
Electric engineering, automation, process control engineering / Electrical cabinet, housing, rack / Elements for switching cabinet, housing, rack / Component for arrangement/baying system (electrical cabinet) (ecI@ss10.0.1-27-18-28-13 [ACN631012])			
Model			Other
Width		mm	50
Height		mm	0
Depth		mm	2575
Material			Steel
Colour			Other
RAL-number			0

IL014050ZU Wall bracket WS(WSM)(WW)...-ID	
IL014050ZU Wall bracket WS(WSM)(WW)...-ID	https://es-assets.eaton.com/DOCUMENTATION/AWA_INSTRUCTIONS/IL014050ZU2017_12.pdf
Declaration of conformity	https://es-assets.eaton.com/DOCUMENTATION/PDF/ci_ce.pdf
allowInterrupt=1&RevisionSelectionMethod=La model certification xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&
allowInterrupt=1&RevisionSelectionMethod=La Save time – we assist you with expert pre- assembly	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&

allowInterrupt=1&RevisionSelectionMethod=La product information xEnergy Safety Ci	http://www.eaton.eu/DE/ecm/idcplg?IdcService=GET_FILE&
tool for calculating the power loss for switching device combinations	http://www.eaton.eu/DE/Europe/Electrical/CustomerSupport/ConfigurationTools/TCTool/index.htm
configurator - xEnergy family	http://www.eaton.eu/DE/Europe/Electrical/CustomerSupport/ConfigurationTools/xEnergyMainSupport/index.htm